

# COXORB

## CoxOrb Steel User Guide



Congratulations on purchasing your new CoxOrb. It has been designed to be as easy as possible to use but the following information will help you get the most from it. If you do have any questions please email us at [queries@active-tools.com](mailto:queries@active-tools.com) or contact your local distributor.

Start / Stop Button



Battery Level Indicator

Decrease Volume Button





Increase Volume Button

Audio / Charging Connector




Microphone Connector

Mute Button

### Basic Operation

Turn On		<b>Press &amp; hold START/STOP for 3 seconds.</b> The unit will turn on.
Turn Off		<b>Press &amp; hold START/STOP for 3 seconds.</b> The unit will turn off.
Volume Control		<b>Press INCREASE / DECREASE VOLUME buttons.</b> Volume level is saved when the unit is turned off.
Mute		<b>Press &amp; hold MUTE button.</b> The unit will be muted.

## Battery & Charging

Battery Life		<b>Battery Level Indicator.</b> Each bar represents approximately 20% of battery life and a full battery gives around 6 hours of normal use.
Charging		<b>Connect the charger to the Audio/Charging connector.</b> The battery takes approximately 3 hours to fully charge from empty.
Full Charge	<b>FULL</b>	When the unit is fully charged the backlight will turn off and 'Full' will appear.
Changing the Battery		Locate and press the dimple on the battery pack, twist anti-clockwise and gently pull the pack off. Reverse these steps to replace the pack.

## Mounting Your CoxOrb

CoxOrbs can be supplied with a mounting cup and will also fit existing mounting cups and moulded-in holders. The spherical back allows the unit to be angled to suit the user.

## Adjusting the Microphone

The microphone arm can be bent to bring the microphone closer to your mouth. However this must be done gently and you must be careful not to make a sharp bend in the tube.

*Please note that the warranty on the microphone only covers manufacturing faults. The CoxOrb must never be picked up and carried using the microphone cable. Also the microphone arm must only be gently reset to suit the user, bending it repeatedly will break it!*

## Frequently Asked Questions

**Is my CoxOrb compatible with the NK and Coxmate wiring looms we have in other boats?**

Yes, CoxOrbs are fully compatible with both NK and Coxmate wiring looms.

**The Audio/Charging is starting to wear out on my CoxOrb. Can I replace it?**

Yes, the CoxOrb incorporates a user replaceable connector block.

**How long will a battery pack last, before it needs to be replaced?**

You can expect approximately 3 years life out of your battery pack.



Active-Tools Ltd

Capital House  
Westbourne Street  
High Wycombe  
Bucks  
HP11 2PZ

t: 01494 512487  
f: 01494 473442  
info@active-tools.com  
www.active-tools.com

# COXORB

## CoxOrb Steel User Guide



Congratulations on purchasing your new CoxOrb. It has been designed to be as easy as possible to use but the following information will help you get the most from it. If you do have any questions please email us at [queries@active-tools.com](mailto:queries@active-tools.com) or contact your local distributor.

Start / Stop Button



Battery Level Indicator

Decrease Volume Button





Increase Volume Button

Audio / Charging Connector




Microphone Connector

Mute Button

### Basic Operation

Turn On		<b>Press &amp; hold START/STOP for 3 seconds.</b> The unit will turn on.
Turn Off		<b>Press &amp; hold START/STOP for 3 seconds.</b> The unit will turn off.
Volume Control		<b>Press INCREASE / DECREASE VOLUME buttons.</b> Volume level is saved when the unit is turned off.
Mute		<b>Press &amp; hold MUTE button.</b> The unit will be muted.

## Battery & Charging

Battery Life		<b>Battery Level Indicator.</b> Each bar represents approximately 20% of battery life and a full battery gives around 6 hours of normal use.
Charging		<b>Connect the charger to the Audio/Charging connector.</b> The battery takes approximately 3 hours to fully charge from empty.
Full Charge	<b>FULL</b>	When the unit is fully charged the backlight will turn off and 'Full' will appear.
Changing the Battery		Locate and press the dimple on the battery pack, twist anti-clockwise and gently pull the pack off. Reverse these steps to replace the pack.

## Mounting Your CoxOrb

CoxOrbs can be supplied with a mounting cup and will also fit existing mounting cups and moulded-in holders. The spherical back allows the unit to be angled to suit the user.

## Adjusting the Microphone

The microphone arm can be bent to bring the microphone closer to your mouth. However this must be done gently and you must be careful not to make a sharp bend in the tube.

*Please note that the warranty on the microphone only covers manufacturing faults. The CoxOrb must never be picked up and carried using the microphone cable. Also the microphone arm must only be gently reset to suit the user, bending it repeatedly will break it!*

## Frequently Asked Questions

**Is my CoxOrb compatible with the NK and Coxmate wiring looms we have in other boats?**

Yes, CoxOrbs are fully compatible with both NK and Coxmate wiring looms.

**The Audio/Charging is starting to wear out on my CoxOrb. Can I replace it?**

Yes, the CoxOrb incorporates a user replaceable connector block.

**How long will a battery pack last, before it needs to be replaced?**

You can expect approximately 3 years life out of your battery pack.



Active-Tools Ltd

Capital House  
Westbourne Street  
High Wycombe  
Bucks  
HP11 2PZ

t: 01494 512487  
f: 01494 473442  
info@active-tools.com  
www.active-tools.com